

Technical Note

DISINFECTING RECOMMENDATIONS FOR DATALOGIC PRODUCTS


To disinfect scanner/device surfaces, Datalogic recommends using one of the two following solutions:

- Isopropyl Alcohol (70% solution at a minimum)
- Household Bleach (5-6% sodium hypochlorite) - ½ cup bleach diluted in 1 gallon of water

Both options are recommended by the CDC as effective disinfecting solutions. Cleaning procedure is detailed below. For more generalized information, please visit:

<https://www.cdc.gov/coronavirus/2019-ncov/community/home/cleaning-disinfection.html>

Use a clean paper towel dampened with one of the above solutions to clean and disinfect scan window, display, and exterior surfaces.

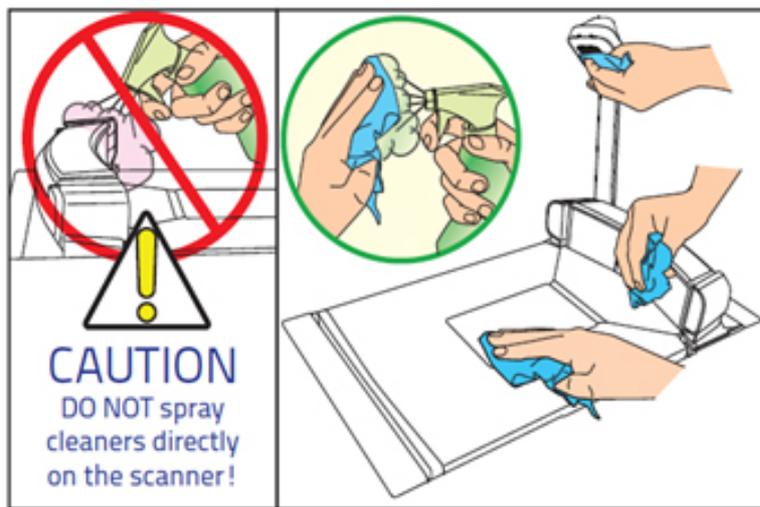

Technical Note



CAUTION

DO NOT use abrasive cleaning agents or abrasive pads to clean this product. Harsh chemicals, disinfectants, and cleansers can cause damage which will adversely affect scanning and weighing performance. Do not apply bleach solution to any metal including contacts.

FOR MORE INFORMATION

Product Marketing Manager: *Ken Decker*

EMEA Customer Admin Manager: *Matteo Astorri*

APAC Customer Admin Manager: *Torres Wu*

AMERICAS Customer Admin Manager: *Charlene Bradetich*

Technical Support L3 Manager: *Mohamed Hamidat*

ken.decker@datalogic.com

matteo.astorri@datalogic.com

torres.wu@datalogic.com

charlene.bradetich@datalogic.com

mohamed.hamidat@datalogic.com